

HOTLINE 400 018 2086

广州海同工业技术有限公司

地址:广东省广州市白云区西槎路聚龙工业区799号6栋一楼

电话: 020-36464335 传真: 020-36464300

武汉海同机器人控制系统有限公司

地址:湖北省武汉市洪山区邮科院路88号武汉国际创客中心


一号楼5层2区 电话: 027-85630916 Guangzhou Hyetone Industrial Technologies Co., Ltd. Block 6, 799 Xicha Rd., Baiyun District, Guangzhou, Guangdong Province, P.R.China. 510407 Tel: +86-20-36464335

Fax: +86-20-36464300

Wuhan Hyetone Robotics and Control Systems Co., Ltd. Zone 2, 5th Floor, Block 1, Wuhan International Creator Center, 88 Youkeyuan Rd., Hongshan District, Wuhan, Hubei Province, P.R.China. 430074

Tel: +86-27-85630916



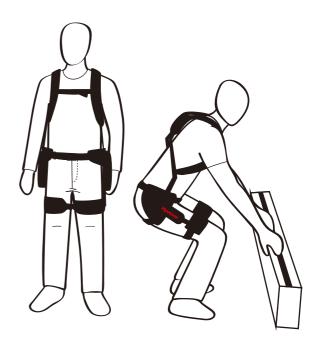

PHES L 金属背 PWIND0701

Quick Guide 产品使用说明







Hyetone™ 海同工业 www.hyetone.com

Contents

目录

物品清单P01	
产品参数P02	
产品组装P03	
结构示意图P04	
穿戴定位P05	
穿戴设置P06	
使用建议P08	
危险警示P09	
联系我们P10	
维护保养P11	
保修售后P12	
Packing ListP13	
SpecificationP14	
Product assemblyP15	
Vest HardwareP16	
Wear positioningP17	
SetupP18	
Use TipsP20	
WarningsP21	
Contact usP22	
MaintenanceP23	
Maintenance/RepairP24	


Maintenance/Repair

Name Time Model Serial number Date Problem and Approach Work done Signature One of the following conditions is not within the scope of the exemption OProduct failture caused by not complying with this quick guide OF aillure caused by self-disassembly and repair OF aillure caused by accident, misuse, misuse, intentional damage

Within one year from the purchase, under normal use, the purchaser can contact the manufacturer to provide free service with the sales invoice, "warranty card" and other purchase vouchers. For products that are out of warranty or are not subject to free repair, the company's technical servic department will also provide paid services.

The manufacturing unit has the right to modify, and All contents in this manual have been carefully checked If there are any printing errors or misunderstandings, the company reserves the right of final interpretation.

物品清单

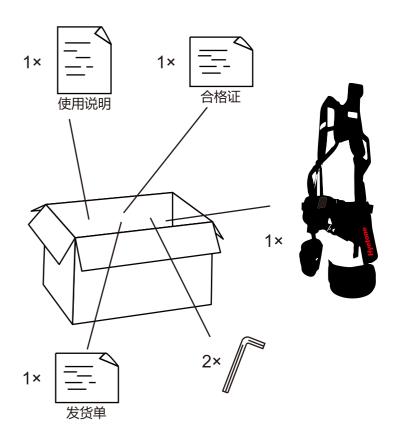



产品参数

规格型号	PWIND0701		
自重	≤3.5kg		
适用身高	1.6~1.85m		
适用体重	40~85kg		
助力效果	≥60%		

PW-IND-07-01-M-BK

产品 种类 规格 版本号尺寸 颜色



注意

1表中参数仅供参考,具体以实物铭牌为准

2.保留更改产品设计与规格的权利

Maintenance

- 1. The metal waist, metal back, strong hand exoskeleton (PHES4, PHES7,PHES9) should not be disassembled at will Accuracymakes the auxiliary performance worse.
- 2. Metal waist, metal back, strong hand exoskeleton (PHES4, PHES7, PHES9) should be lightly loaded and unloaded during transportation, to avoid rain, moisture, exposure, and avoid flammable, corrosive items or chemicals such as oil, acid, alkali Mixed medicines.
- 3. The metal waist, metal back, strong hand exoskeleton (PHES4,PHES7, PHES9) should be stored in a dry, ventilated warehouse,and should not be exposed to high temperatures, open flames, strong acids, and sharp hard objects. Avoid direct sunlight.
- 4. The wearables are soaked with sweat after use, and need to be dried before they can be stored, and can not be stacked freely, they need to be hung and placed.
- 5. After each use, you need to adjust it and hang it on a suitable shelf to avoid folding and stress. as shown in Figure .
- 6.Before each use, please check whether the wearing parts are worn, scratched or damaged, and whether the mode switching switch can be switched smoothly to ensure that they can be used normally; when bad phenomena are found, they should be replaced or repaired in time.
- 7. When bending over less than 500 times per day, maintain it once a week, check all wear parts for wear, scratches or damage, whether the mode switch can be switched smoothly, whether the connection parts are loose, and whether the metal parts are loose There is deformation damage;
- 8. The bending times are greater than 500 times during daily use, and the maintenance is performed once every 3 days. Check all wear parts for wear, scratches or d amage, whether the mode switch can be switched smoothly, whether the connecting parts are loose, and whether the metal parts are loose. There is deformation damage.
- 9.Metal waist, metal back, strong hand exoskeleton (PHES4, PHES7, PHES9), please use a damp cloth, clean water / warm water and mild cleaning products (cleaning products without solvent).
- 1) Make sure that no water enters the metal parts. Never immerse this product in water.
- 2) Do not use any solvents, bleach, polish, etc. to clean the product.



Contact

Thank you for choosing our products. Please fill up the "Warranty Card" and send it to us. Contact us on 400-018-2086 if you have any questions. We are happy to process your request.


Note


The information in this document is subject to change without notice. Please contact Customer Service for more information.

6th Building, 799 Xicha Rd., Baiyun District, Guangzhou, Guangdong Province, P.R.China. 510407 www.hyetone.com


产品组装

使用前安装方法:从包装箱中取出产品后,将支撑片2平行插入背部挡板7下方相应的孔中直到底部(下图A),保证弹珠卡在支撑片4的缺口中(图B):

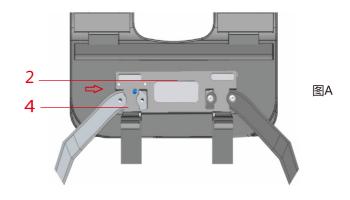

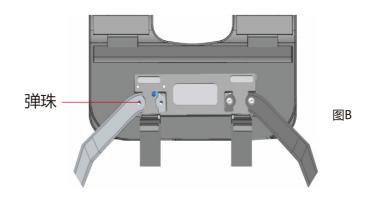


结构示意图

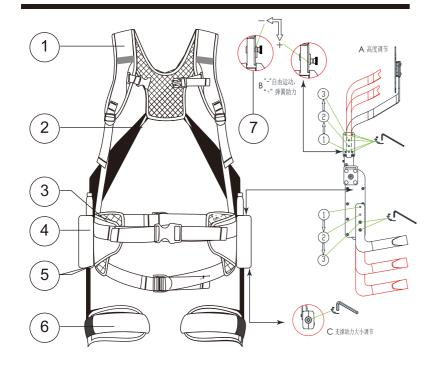

- 1 背带
- 2 支撑片
- 3 腰带
- 4 蓄能盒

- 5 力调节口
- 6 腿部挡板
- 7 模式切换开关


Warnings

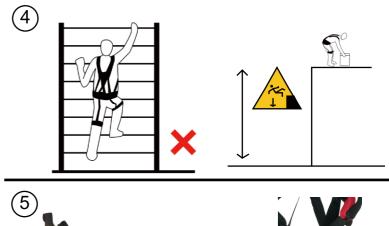







Use Tips

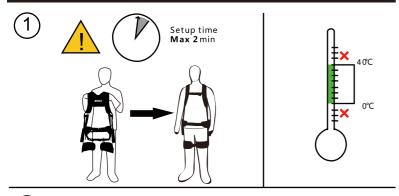


2 First use

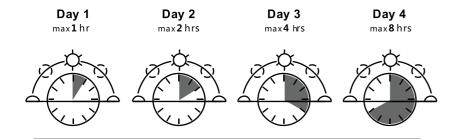


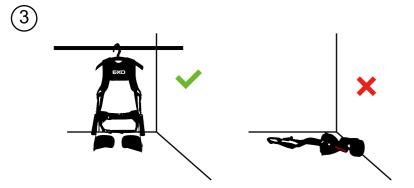

穿戴定位

将身体髋部的旋转中心与本产品的旋转中心对齐

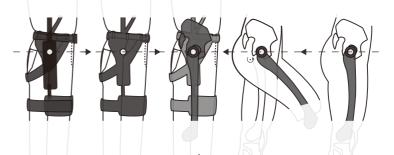

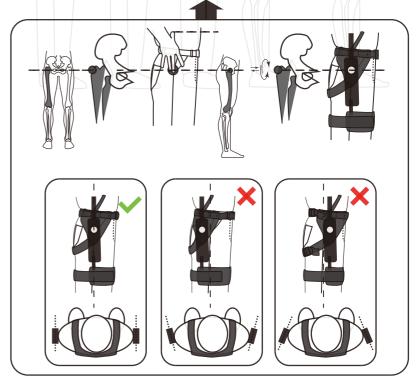


穿戴设置








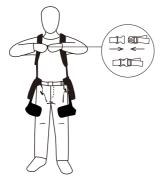 






Setup/Preparations

- 1. Check the product for damage before donning it.
- 2. Pull the mechanical switches (See Fig. B on P03) to allow the pendulum swing on the hip by releasing the Energy Storage Box.
- 3. Put one strap over each shoulder and fasten the buckle on your chest.
- 4. Align the waist belt with the hip joint and keep the two ends pulled to make things comfortable. (Lift up the end to release the belt)
- 5. Tighten the red belts.
- 6. Tighten your thighs around and press the hook-and-loop fasteners on the leg pads.
- 7. Align Energy Storage Boxes with the thighs and adjust the belts on the back and hip to a proper length (Lift up the end of a strap to release the belt. Pull the ends of belt to the opposite direction of the buckle to tighten it), and then adjust the front waist belt to well fit your body.
- 8. Push the mechanical switches (See Fig. B on P03) and bend down to make sure that the assist force is applied on your back.




Tutorial Video

Setup/Preparations

 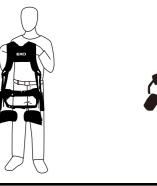






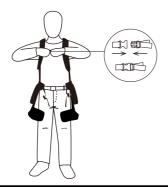






穿戴设置

- 1、使用前,注意检查产品是否有破损
- 2、上拉两边的模式切换开关(P03页细节视图B), 保证蓄能盒可以自由摆动
- 3、双肩穿入背带,扣紧胸前卡扣
- 4、腰带对齐髋关节处,拉住背带织带尾端向下拉紧,调至舒适位置(勾起调节扣尾端即可放松织带)
- 5、红色背拉调节带拉紧
- 6、腿部档块织带绕大腿一圈贴紧固定
- 7、两侧盒子对齐髋关节两侧,先调整后腰及臀部织带长度至舒适位置处(轻勾起调节扣尾端放松织带,拉住织带尾端向扣子返方向拉紧)再调整前腰带至舒适位置处
- 8、放下两边的模式切换开关(P03页细节视图B), 做几次弯腰直腰动作,确认弹簧助力到位。


外骨骼视频讲解 请扫描右方二维码查看




使用建议

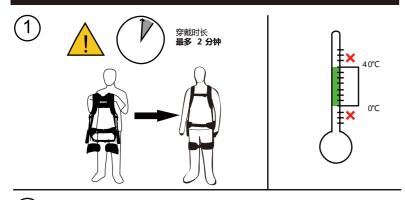


2) 初次使用适应时长

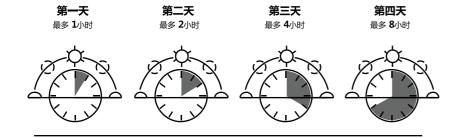


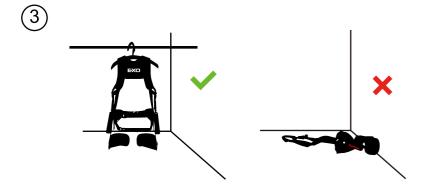


Wear positioning

Align the center of rotation of the body hip with the center of rotation of this product

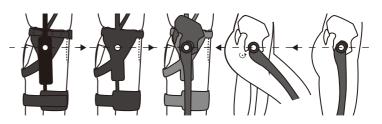

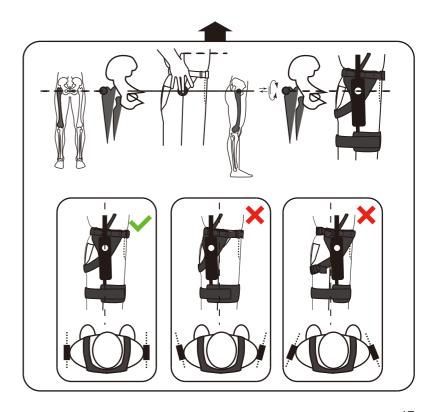


Vest Hardware

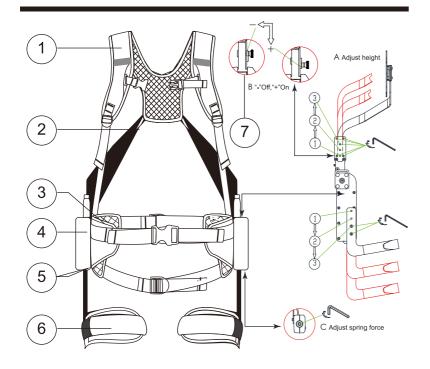

- 1 Suspenders
- 2 Rear Torso
- 3 Waist Belt
- 4 Energy Storage Box
- 5 Sprint Force Adjustment hole
- 6 Leg Pad
- 7 Mechanical switch

危险警示

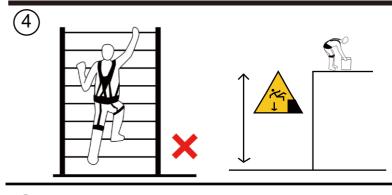





联系我们

感谢您对海同工业产品的信任与支持!为更及时的为您提供维修、咨询等服务,请认真填写《海同工业产品保修卡》,并妥善保管。您在使用过程中如有疑问,欢迎拨打全国服务热线400-018-2086与我们联系,我们将尽快给予您满意的答复。

地址:广州市白云区西槎路聚龙工业区799 号6栋一楼


邮编:510407


公司网站:www.hyetone.com

注:此说明书内容会不定期进行修订,可能 会与实际产品有出入,请电话咨询海同 工业客服。

Product assembly

Installation method before use: After removing the product from the packaging box, insert the support piece 2 parallel into the corresponding hole under the back baffle 7 until the bottom (figure A) to ensure that the marbles are caught in the gap of the support piece 4 (figure B):

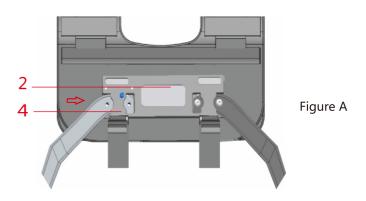

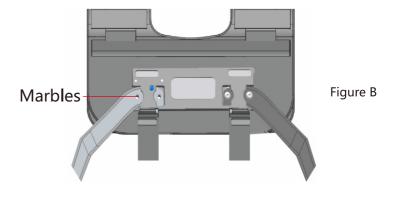

Specifications

Model	PWIND0701
Weight	≤3.5kg
Worker Height Range	1.6~1.85m
Worker Weight Range	40~85kg
Adjustable Lift Assistance	≥60%

PW-IND-<u>07</u>-<u>01</u>-<u>M</u>-<u>BK</u>

Product Series Norm Code Size Color



Note

The information in this document is subject to change without notice. Please contact Customer Service for more information.

维护保养

- 1、金属腰、金属背、壮手外骨骼(PHES4、PHES7、PHES9)各部件不要随意拆卸,检查和维修工作必须由经过培训的技术人员来执行,以免影响结构的完整性和各部件的配合精度,使辅助性能变差。
- 2、金属腰、金属背、壮手外骨骼(PHES4、PHES7、PHES9)在运输中应轻装轻卸,避免雨淋、受潮、曝晒,避免与油、酸、碱等易燃、腐蚀物品或化学药品混装。
- 3、金属腰、金属背、壮手外骨骼(PHES4、PHES7、PHES9)应贮存在干燥、 通风的仓库中,不得接触高温、 明火、 强酸和尖锐的坚硬物体, 应避免阳光直射。
- 4、使用后穿戴件被汗液湿透,需要晾干后才能存放好,且不能堆叠随意摆放,需要挂好摆放。
- 5、每次使用完需调节后 挂在合适的架子上放好, 避免折叠和受力。如右图 所示。



- 6、在每次使用前,请检查各穿戴件是否有磨损、刮伤或损坏,模式 切换开关能否顺利切换,确保都能正常使用;当发现有不良现象时 应及时更换或维修。
- 7、每天使用时弯腰次数小于500次,每1周维护1次,全面检查各穿戴件是否有磨损、刮伤或损坏,模式切换开关能否顺利切换,连接件是否有松动、金属件是否有变形损伤。
- 8、每天使用时弯腰次数大于500次,每3天维护1次,全面检查各穿 戴件是否有磨损、刮伤或损坏,模式切换开关能否顺利切换,连接 件是否有松动、金属件是否有变形损伤。
- 9、金属腰、金属背、壮手外骨骼(PHES4、PHES7、PHES9),请使用湿布,清水/温水和温和的清洁产品(不含有溶剂的清洁产品)。
- 1)确保没有水进入金属部件。切勿将本产品浸入水中。
- 2)请勿使用任何溶剂、漂白剂、抛光剂等来清洁产品。



保修售后

产品型号

WARRANTY CARD

保 修 十

顾客姓名	购买日期		

产品编号

保修日期	故障及处理方法	完成日期	顾客签字

下列情况之—不在免修范围内

◎没有按说明书上的要求而造成的操作故障

◎由于自行拆卸、修理而造成的故障

◎由于意外、误用、乱用、故意损坏而造成的故障

售后服务

注意

自购买起一年内,在正常使用情况下,购买者可凭销售发票、《保修卡》等购买凭证联系厂家提供免费服务。对于超过保修期或者不属于免费维修的产品,本公司技术服务部也会热情提供有偿服务。

制造单位有改型的权利,怒不另行通知 本说明书上所有内容均经过认真核对, 如有任何印刷错漏或内容上的误解,本 公司保留最终解释权

Packing List

