

EXOSKELETON
www.hyetone.com

HOTLINE
400 018 2086

广州海同工业技术有限公司

地址：广东省广州市白云区西槎路聚龙工业区799号6栋一楼
电话：020-36464335
传真：020-36464300

 
武汉海同机器人控制系统有限公司

地址：湖北省武汉市洪山区邮科院路88号武汉国际创客中心
一号楼5层2区
电话：027-85630916

Guangzhou Hyetone Industrial Technologies Co., Ltd.
Block 6, 799 Xicha Rd., Baiyun District, Guangzhou,
Guangdong Province, P.R.China. 510407
Tel: +86-20-36464335
Fax: +86-20-36464300

Wuhan Hyetone Robotics and Control Systems Co., Ltd.
Zone 2, 5th Floor, Block 1, Wuhan International Creator
Center, 88 Youkeyuan Rd., Hongshan District, Wuhan,
Hubei Province, P.R.China. 430074
Tel: +86-27-85630916

EXO

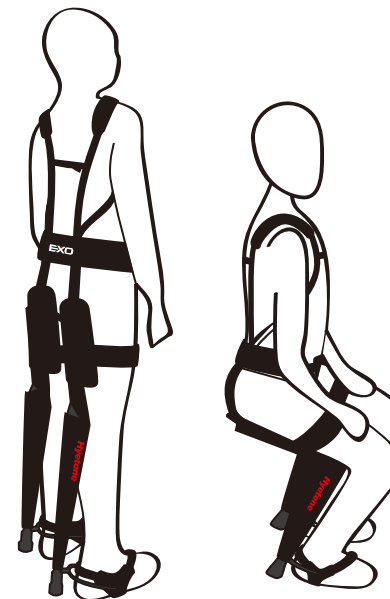

PHEL | 随意坐
PLIND0101

Quick Guide
产品使用说明



警告：
使用时严禁后倾
需专业指导使用




Hyetone™ 海同工业 www.hyetone.com

Contents

目录

物品清单	-----P01
产品参数	-----P02
结构示意图	-----P03
穿戴设置	-----P04
使用建议	-----P06
危险警示	-----P07
联系我们	-----P08
保修售后	-----P09
Packing List	-----P11
Specification	-----P12
Vest Hardware	-----P13
Setup	-----P14
Use Tips	-----P16
Warnings	-----P17
Contact us	-----P18
Warranty&After-sales service	-----P19

 物品清单

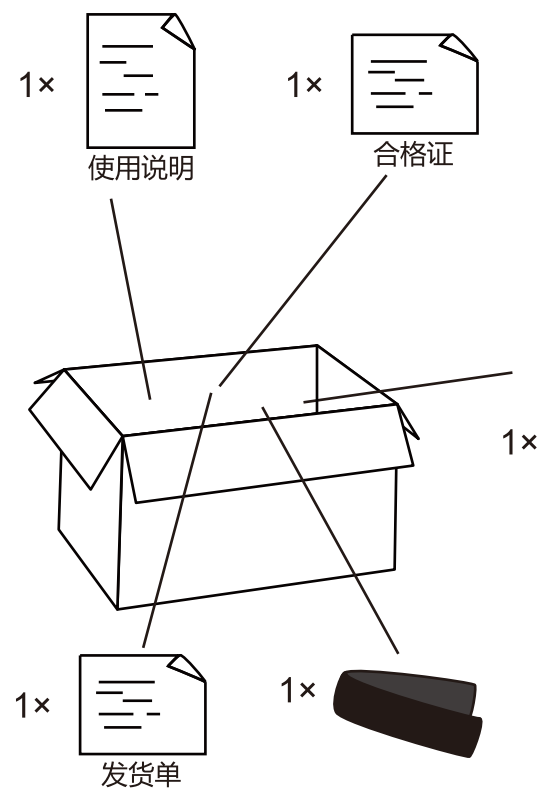

产品参数

规格型号	PLIND0101
自重	≤3.5kg
适用身高	1.6~1.85m
适用体重	40~85kg
助力效果	≥70%

PL-IND-01-01-M-BK

产品 种类 规格 版本号 尺寸 颜色

注意

- 1.表中参数仅供参考，具体以实物铭牌为准
- 2.保留更改产品设计与规格的权利



Maintenance/Repair

WARRANTY CARD

Name _____ Time _____
Model _____ Serial number _____

Date	Problem and Approach	Work done	Signature

One of the following conditions is not within the scope of the exemption

- ☐Product failure caused by not complying with this quick guide
- ☐Failure caused by self-disassembly and repair
- ☐Failure caused by accident, misuse, misuse, intentional damage

Within one year from the purchase, under normal use, the purchaser can contact the manufacturer to provide free service with the sales invoice, "warranty card" and other purchase vouchers. For products that are out of warranty or are not subject to free repair, the company's technical service department will also provide paid services.

The manufacturing unit has the right to modify, and All contents in this manual have been carefully checked. If there are any printing errors or misunderstandings, the company reserves the right of final interpretation.

Contact

 
Thank you for choosing our products. Please fill up the "Warranty Card" and send it to us. Contact us on **400-018-2086** if you have any questions. We are happy to process your request.

Note

The information in this document is subject to change without notice. Please contact Customer Service for more information.

6th Building, 799 Xicha Rd., Baiyun District, Guangzhou, Guangdong Province, P.R.China. 510407
www.hyetone.com

结构示意图


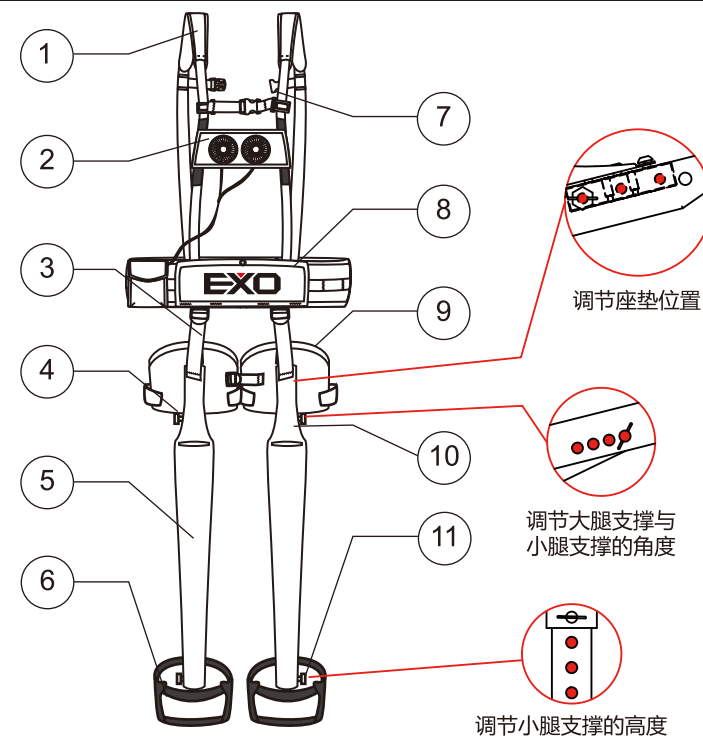


- | | |
|-----------|----------|
| 1 背带 | 7 调节扣 |
| 2 风扇 (选配) | 8 腰带 |
| 3 坐垫连接带 | 9 坐垫组件 |
| 4 大腿调节销 | 10 大腿组件 |
| 5 小腿组件 | 11 小腿调节销 |
| 6 鞋套组件 | |


穿戴设置



  
Warnings

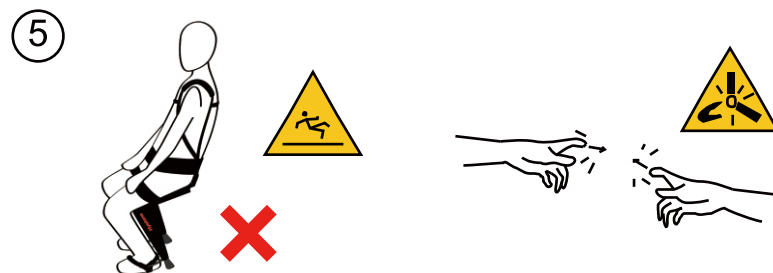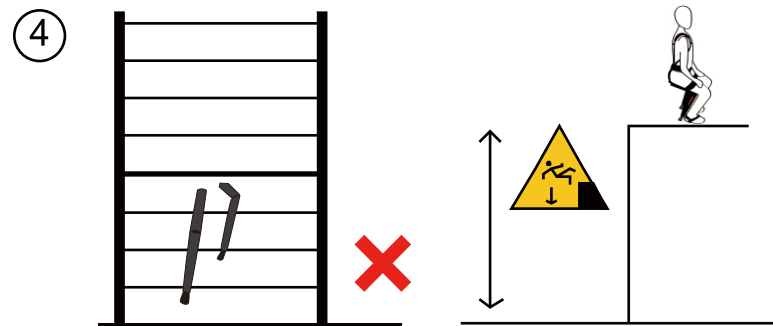

 
Warning:
Do not lean backwards
when using

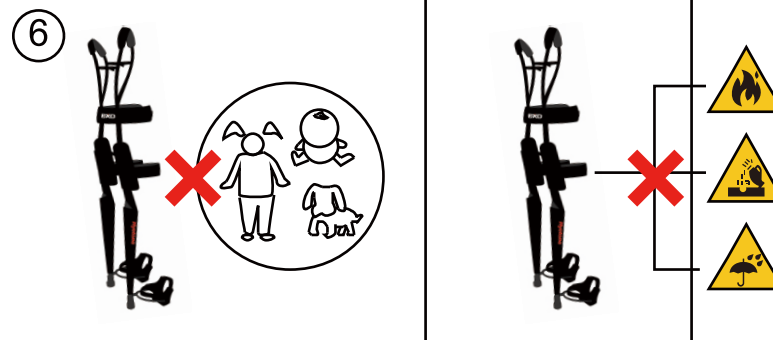


Use Tips

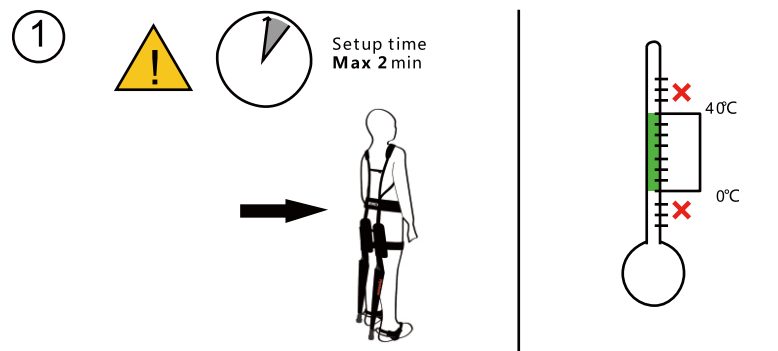 

② First use

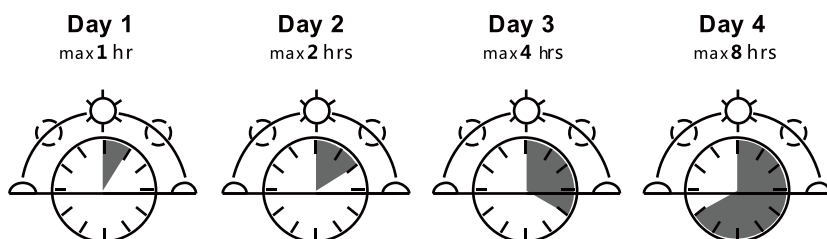 

③

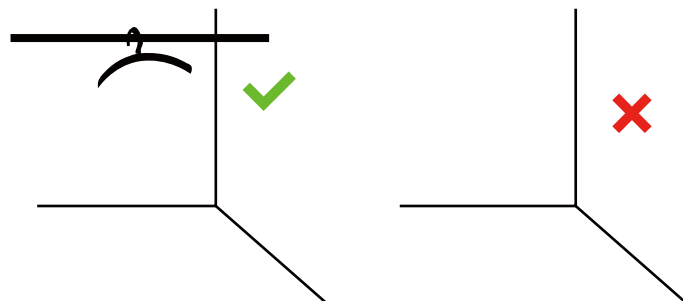 


穿戴设置

- 1、使用前，注意检查产品是否有破损
- 2、扣紧背部卡扣
- 3、双肩穿入背带，两肩垫放至肩膀处，扣紧胸前卡扣
- 4、穿进鞋帮，调整后鞋帮宽度，扣紧鞋扣（脱鞋时轻勾起鞋扣，拉出带子即可）
- 5、拉住背带织带尾端向上拉紧，调整至舒适位置（背带可卸除，按压背带尾端卡扣两侧，即可打开扣子）
- 6、松开座垫下方的拉环分度销，使坐垫对齐臀部，插入分度销固定座垫；拉住坐垫与腰带连接带尾端向下拉，两坐垫间压紧扣子，固定两坐垫间距
- 7、绑腿绕大腿一圈贴紧（坐垫板两侧可以抽出绑腿进行更换）
- 8、选择大腿支撑上快卸销插入的不同孔位，可调节大腿支撑与小腿支撑的角度
- 9、选择小腿伸缩管上快卸销插入的不同孔位，可调节小腿支撑的高度



外骨骼视频讲解
请扫描右方二维码查看



 使用建议

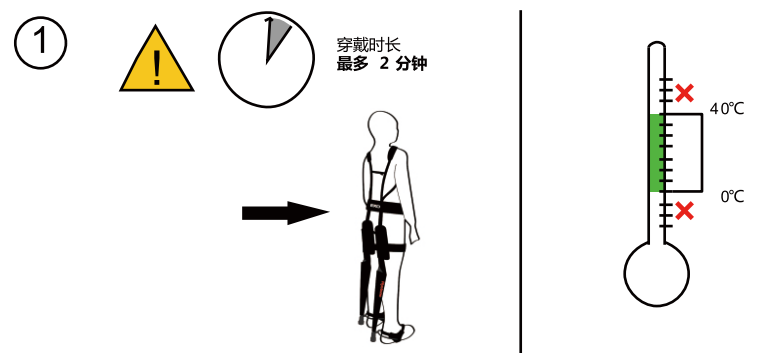

② 初次使用适应时长

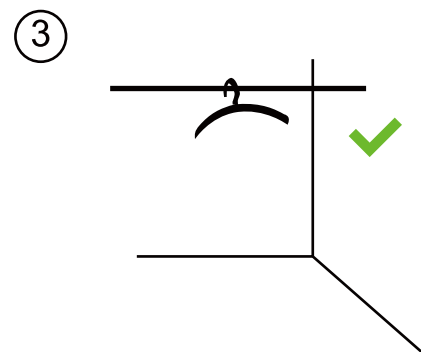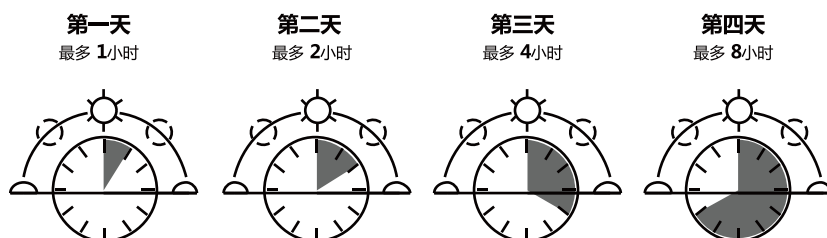  

Setup/Preparations

 
 
1. Check the product for damage before donning it.
2. Fasten the buckle on your back.
3. Put one strap over each shoulder and fasten the buckle on your chest.
4. Put on the shoe cover. Adjust the belt on the tail of the shoe cover and fasten the buckle (pull out the strap to take belt out).
5. Keep the two ends of belts pulled to make things comfortable. (the strap can be removed by pressing the sides of the buckle to open)
6. Pull the pin and align the cushion component with the hip. And then put the pin back. Pull the buttock pad connector down to tighten it. Pull the belts between two cushion components can adjust the distance between them.
7. Tighten your thighs around and press the hook-and-loop fasteners. (hook-and-loop fasteners are replaceable)
8. The different filling holes correspond to different knee bending angles. Choose the proper one to put the pin in.
9. The different filling holes correspond to different calf heights. Choose the proper one to put the pin in.

Tutorial Video




Setup/Preparations

危险警示

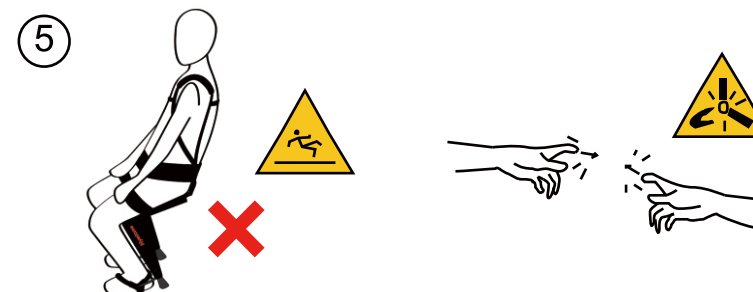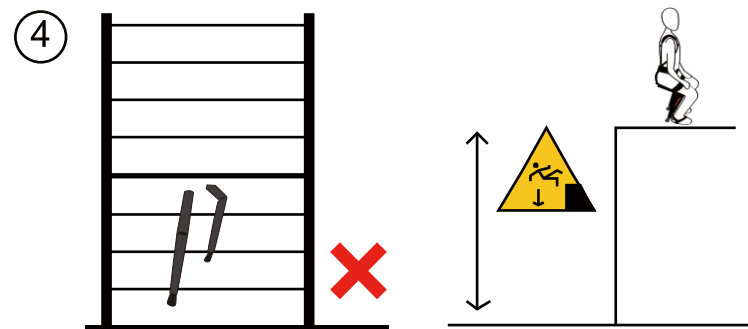

 **警告：使用时严禁后倾，
需专业指导使用**

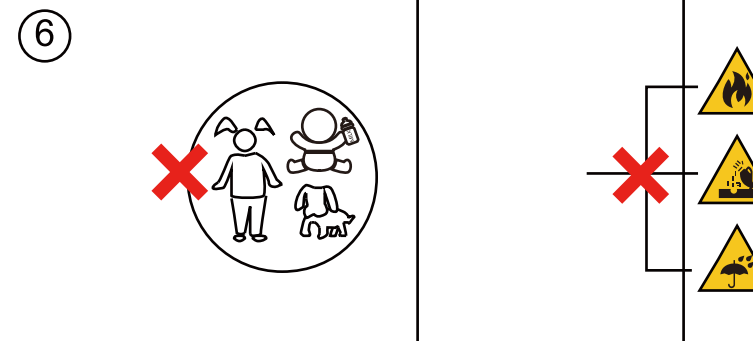 

联系我们

感谢您对海同工业产品的信任与支持！为更及时的为您提供维修、咨询等服务，请认真填写《海同工业产品保修卡》，并妥善保管。您在使用过程中如有疑问，欢迎拨打全国服务热线400-018-2086与我们联系，我们将尽快给予您满意的答复。

 
地址：广州市白云区西槎路聚龙工业区799号6栋一楼

邮编：510407

公司网站：www.hyetone.com

注：此说明书内容会不定期进行修订，可能会与实际产品有出入，请电话咨询海同工业客服。

Vest Hardware

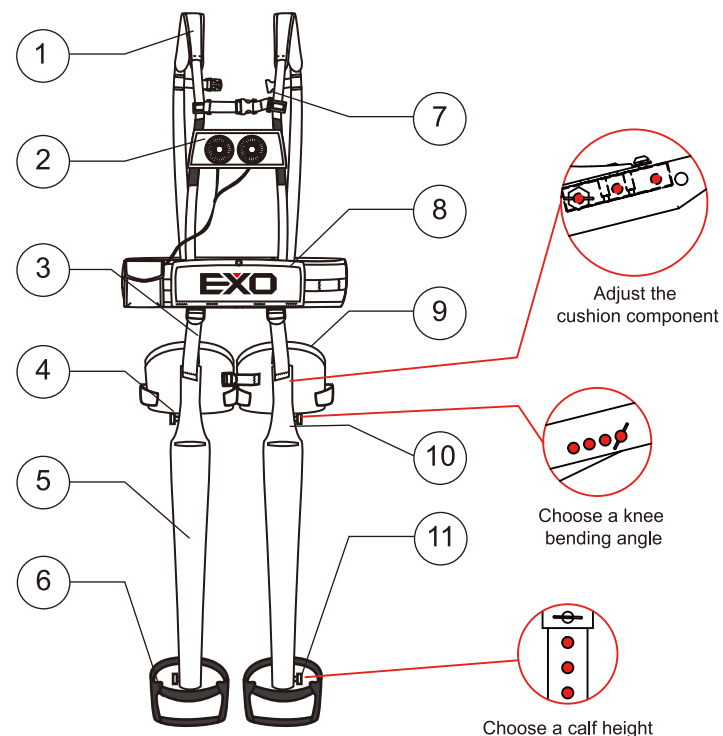

- | | |
|-------------------------|------------------------|
| 1 Suspenders | 7 Adjustable Buckle |
| 2 Fan(optional) | 8 Waist Belt |
| 3 Buttock Pad Connector | 9 Cushion Component |
| 4 Thigh Adjustment Pin | 10 Thigh Component |
| 5 Calf Component | 11 Calf Adjustment Pin |
| 6 Shoe Cover | |

Specifications

Model	PUIND0101MBK
Weight	≤2kg
Worker Height Range	1.6~1.85m
Worker Weight Range	40~85kg
Adjustable Lift Assistance	≥80%
Wear Parts Service Life	≥300,000 times

PU-IND-01-01-M-BK

Product Series Norm Code Size Color

Note

The information in this document is subject to change without notice. Please contact Customer Service for more information.

保修售后

WARRANTY CARD

保 修 卡

顾客姓名 _____ 购买日期 _____

产品型号 _____ 产品编号 _____

保修日期	故障及处理方法	完成日期	顾客签字

下列情况之一不在免修范围内

- 没有按说明书上的要求而造成的操作故障
- 由于自行拆卸、修理而造成的故障
- 由于意外、误用、乱用、故意损坏而造成的故障

售后服务

自购买起一年内，在正常使用情况下，购买者可凭销售发票、《保修卡》等购买凭证联系厂家提供免费服务。对于超过保修期或者不属于免费维修的产品，本公司技术服务部也会热情提供有偿服务。

注意

制造单位有改型的权利，恕不另行通知。本说明书上所有内容均经过认真核对，如有任何印刷错漏或内容上的误解，本公司保留最终解释权。

Packing List

